


EXPLODED VIEW

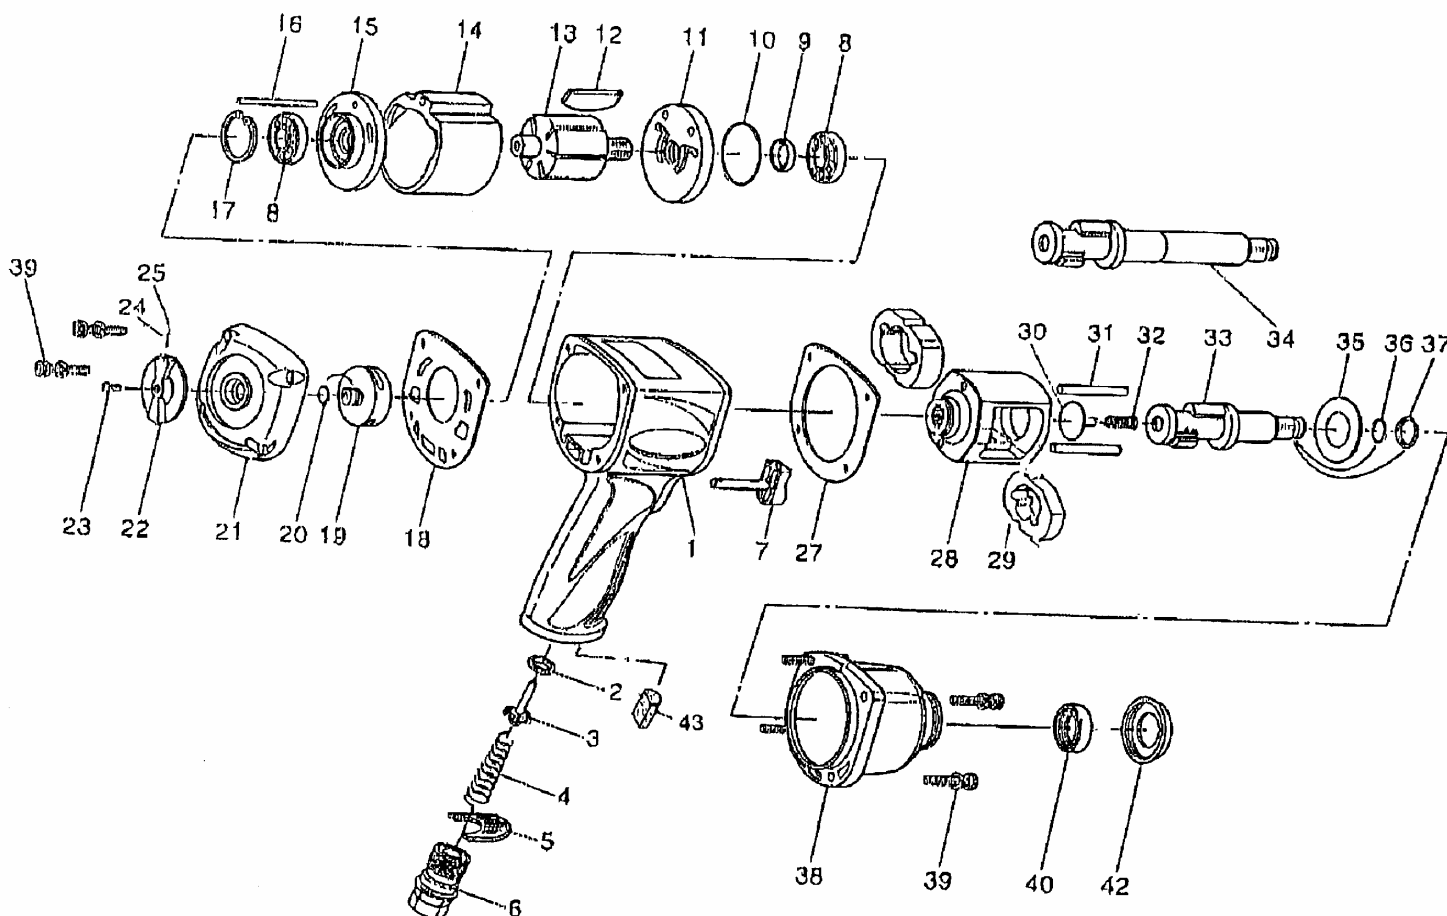

PARTS LIST

◆Parts may be changed with or without notice for improvement.

PARTS No.	NAME OF PARTS	PER SET	PARTS CODE	PARTS No.	NAME OF PARTS	PER SET	PARTS CODE
1	Motor Housing	1	14HT01	21	End Cap	1	14HT21
2	Valve Stem Bushing	1	14HT02	22	Regulator Lever	1	14HT22
3	Valve Stem	1	14HT03	23	Screw	1	14HT23
4	Throttle Spring	1	14HT04	24	Spring	1	14HT24
5	Exhaust Deflector	1	14HT05	25	Steel Ball	1	14HT25
6	Swivel Inlet Bushing	1	14HT06	27	Front Gasket	1	14HT27
7	Throttle Button	1	14HT07	28	Hammer Cage	1	14HT28
8	Ball Bearing	2	14HT08	29	Hammer	2	14HT29
9	Plate Oil Seal	1	14HT09	30	Thrust Button	1	14HT30
10	O-Ring	1	14HT10	31	Hammer Pin	2	14HT31
11	Front Plate	1	14HT11	32	Compression Fitting	1	14HT32
12	Rotor Blade	6	14HT12	33	Anvil Shank	1	14HT33
13	Rotor	1	14HT13	35	Anvil Spacer	1	14HT35
14	Cylinder	1	14HT14	36	O-Ring	1	14HT36
15	Rear Plate	1	14HT15	37	Socket Ret. Ring	1	14HT37
16	Guide Pin	1	14HT16	38	Clutch Housing	1	14HT38
17	C-Ring	1	14HT17	39	Screw w/ Washer	8	14HT39
18	End Cap Gasket	1	14HT18	40	Oil Seal	1	14HT40
19	Reverse Regulator	1	14HT19	42	Rubber Nose Guard	1	14HT42
20	O-Ring	1	14HT20	43	Foam Muffler	1	14HT43