
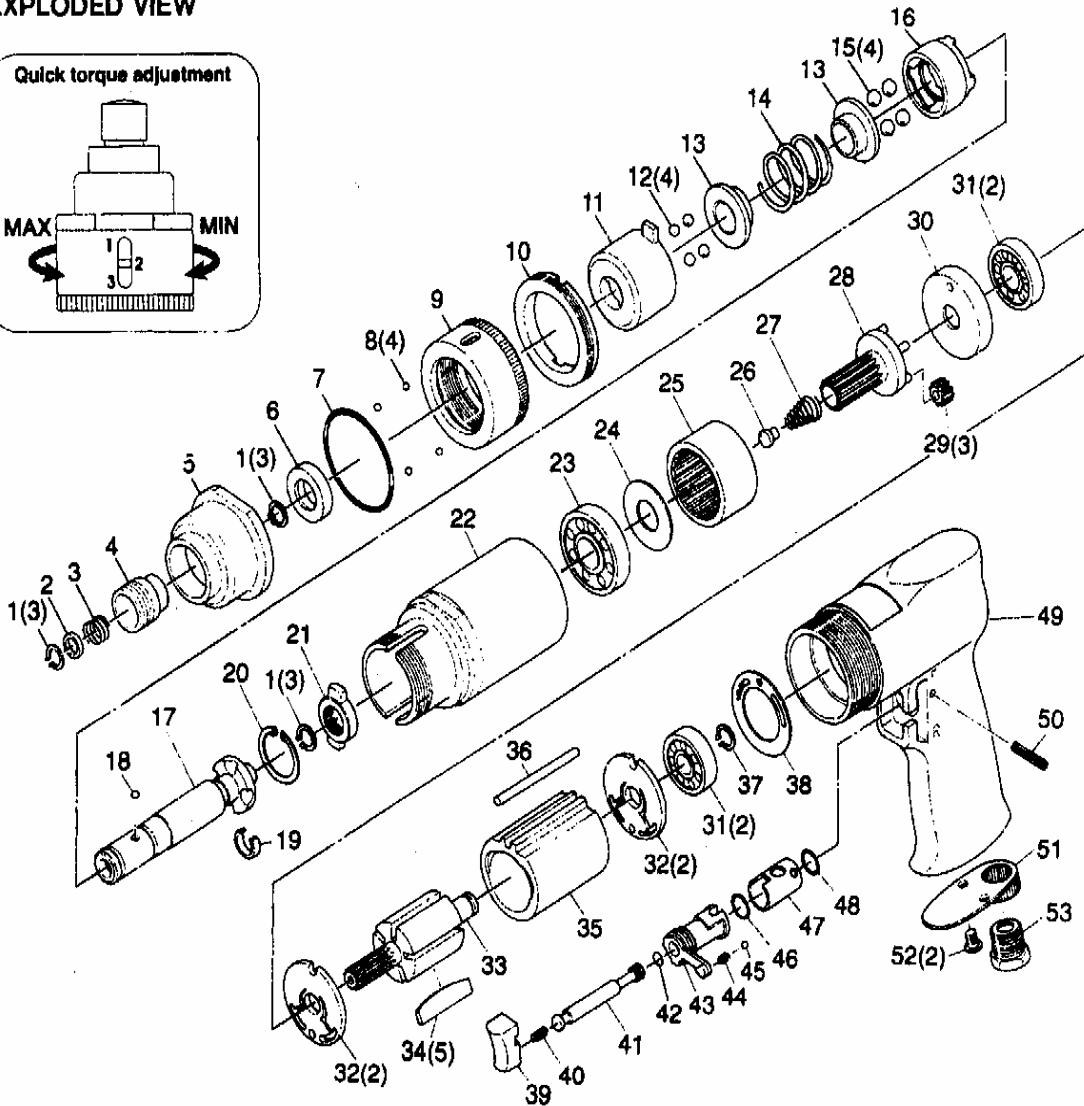


Model No. KPT-SD110A

Pistol Grip Screw Driver

With External Torque Adjustment Knob

EXPLODED VIEW

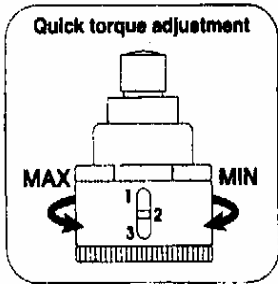

PARTS LIST

.Parts may be changed with or without notice for improvement.

PARTS No.	NAME OF PARTS	PER SET	PARTS CODE	ORDER	PARTS No.	NAME OF PARTS	PER SET	PARTS CODE	ORDER
1	Retainer Ring	3	810A01		28	Spindle	1	810A28	
2	Washer	1	810A02		29	Idle Gear w/Bush	3	810A29	
3	Spring	1	810A03		30	Bearing Case	1	810A30	
4	Ball Retainer	1	810A04		31	Ball Bearing	2	810A31	
5	Head Cap	1	810A05		32	End Plate	2	810A32	
6	Spacer	1	810A06		33	Rotor	1	810A33	
7	O-Ring	1	810A07		34	Rotor Blade	5	810A34	
8	Steel Ball	4	810A08		35	Cylinder	1	810A35	
9	Adjust Ring	1	810A09		36	Cylinder Pin	1	810A36	
10	Adjust Nut	1	810A10		37	Retainer Ring	1	810A37	
11	Adjust Cup	1	810A11		38	Motor Gasket	1	810A38	
12	Steel Ball	4	810A12		39	Trigger	1	810A39	
13	Thrust Washer	2	810A13		40	Spring	1	810A40	
14	Spring	1	810A14		41	Valve Stem	1	810A41	
15	Steel Ball	4	810A15		42	O-Ring	1	810A42	
16	clutch Joe	1	810A16		43	Reverse Lever	1	810A43	
17	Work Spindle	1	810A17		44	Spring	1	810A44	
18	Steel Ball	1	810A18		45	Steel Ball	1	810A45	
19	Wiper	1	810A19		46	O-Ring	1	810A46	
20	Snap Ring	1	810A20		47	Reverse Bushing	1	810A47	
21	Dog	1	810A21		48	O-Ring	1	810A48	
22	Lock Ring	1	810A22		49	Motor Housing	1	810A49	

23	Ball Bearing	1	810A23	50	Roll Pin	1	810A50
24	Spacer	1	810A24	51	Exhaust Defuser	1	810A51
25	Internal Gear	1	810A25	52	Screw	2	810A52
26	Guide Pin	1	810A26	53	Air Inlet	1	810A53
27	Spring	1	810A27				