


EXPLODED VIEW

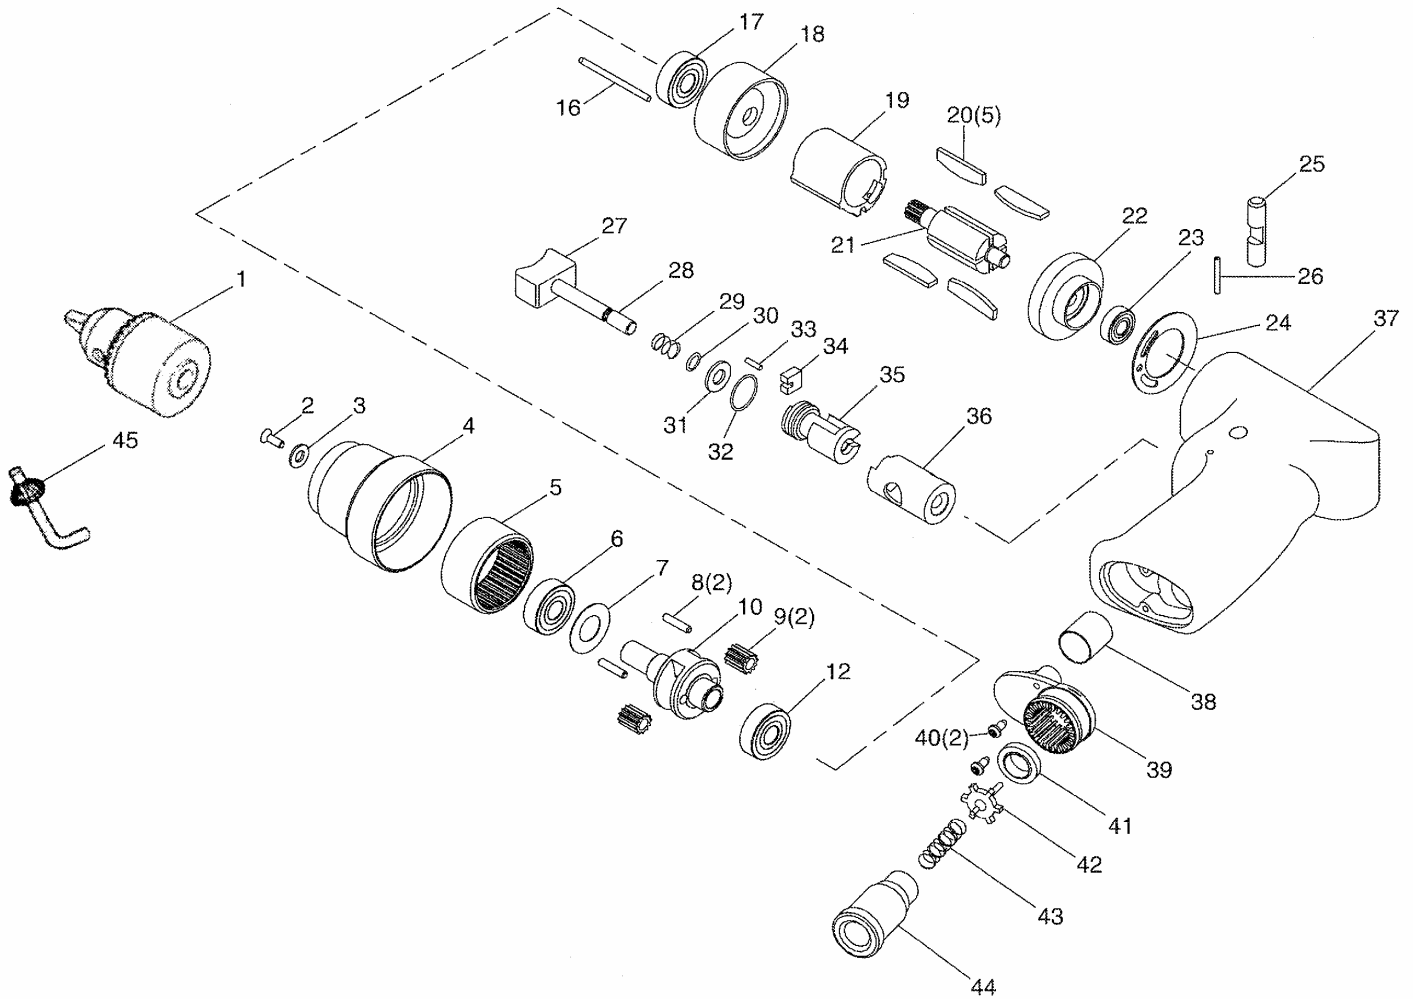

PARTS LIST

2008.10

◆Parts may be changed with or without notice for improvement.

PARTS No.	NAME OF PARTS	PER SET	PARTS CODE	PARTS No.	NAME OF PARTS	PER SET	PARTS CODE
1	Drill Chuck	1	386001	26	Roll Pin	1	386026
2	Screw	1	386002	27	Trigger	1	386027
3	Chuck Spacer	1	386003	28	Valve Shaft	1	386028
4	Clamp Nut	1	386004	29	Spring	1	386029
5	Internal Gear	1	386005	30	O-Ring	1	386030
6	Ball Bearing	1	386006	31	Washer	1	386031
7	Washer	1	386007	32	O-Ring	1	386032
8	Planet Gear Pin	2	386008	33	Needle Roller	1	386033
9	Planet Gear	2	386009	34	Slide Plate	1	386034
10	Planet Carrier	1	386010	35	Reverse Valve	1	386035
12	Ball Bearing	1	386012	36	Reverse Bush.	1	386036
16	Motor Pin	1	386016	37	Motor Housing	1	386037
17	Ball Bearing	1	386017	38	Silencer	1	386038
18	Front End Plate	1	386018	39	Deflector	1	386039
19	Cylinder	1	386019	40	Screw	2	386040
20	Rotor Blade	5	386020	41	Valve Seat	1	386041
21	Rotor	1	386021	42	Valve	1	386042
22	Rear End Plate	1	386022	43	Valve Spring	1	386043
23	Ball Bearing	1	386023	44	Air Inlet	1	386044
24	Motor Gasket	1	386024	45	Chuck Key	1	386045
25	Reverse Button	1	386025				