


EXPLODED VIEW

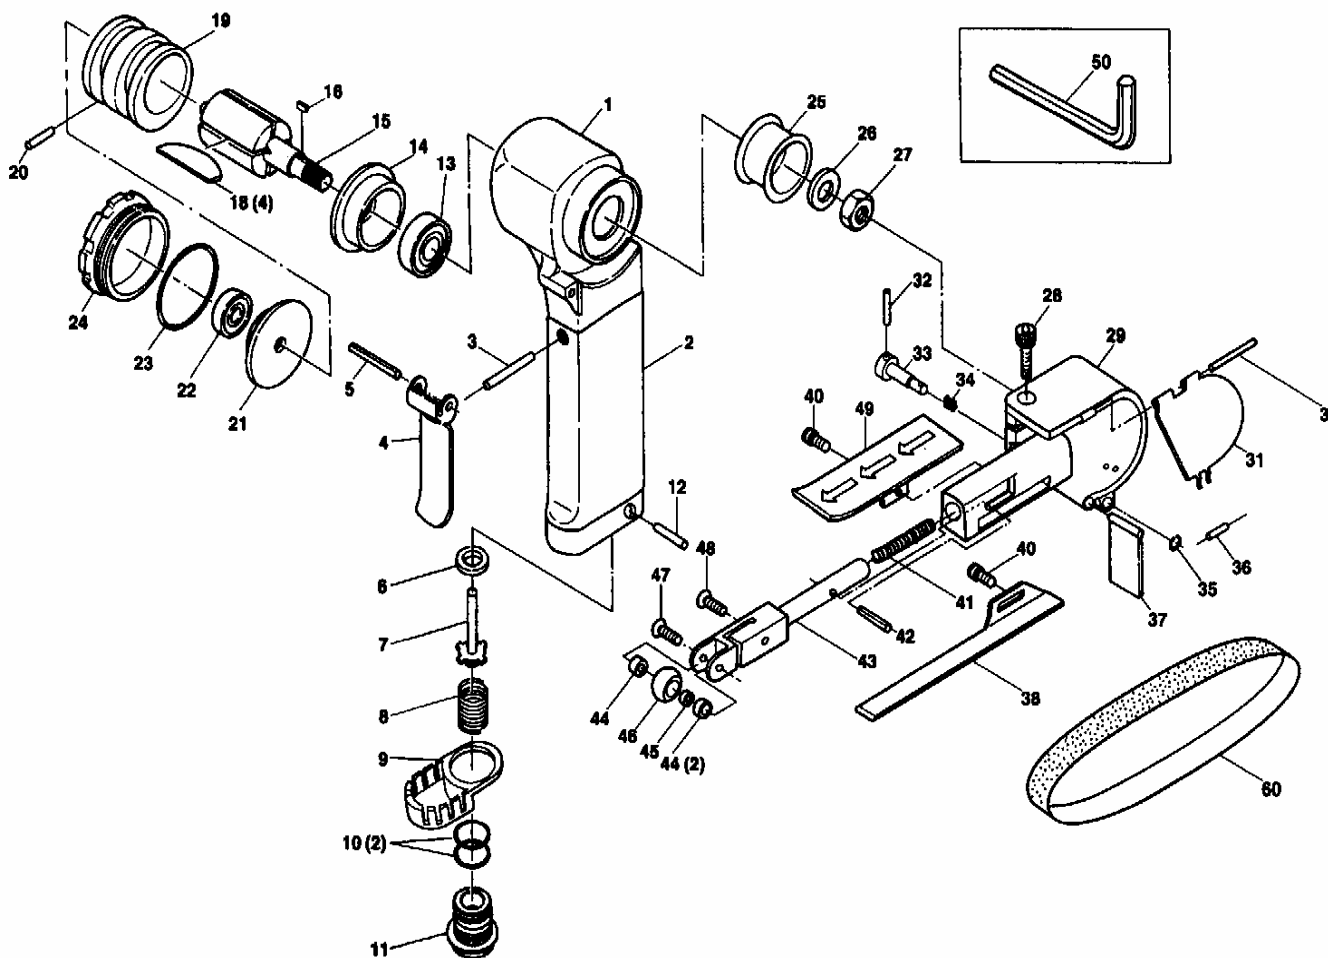

PARTS LIST

◆Parts may be changed with or without notice for improvement.

PARTS No.	NAME OF PARTS	PER SET	PARTS CODE	PARTS No.	NAME OF PARTS	PER SET	PARTS CODE
1	Motor Housing	1	38001	27	Lock Nut	1	38027
2	Handle Cover	1	38002	28	Adjust Screw	1	38028
3	Valve Pin	1	38003	29	Wheel Cover Body	1	38029
4	Throttle Lever	1	38004	30	Spring Pin	1	38030
5	Lever Pin	1	38005	31	Wheel Cover	1	38031
6	Valve Seat	1	38006	32	Spring Pin	1	38032
7	Valve	1	38007	33	Cover Lock Pin	1	38033
8	Valve Spring	1	38008	34	Spring	1	38034
9	Deflector	1	38009	35	Retaining Ring	1	38035
10	O-Ring	2	38010	36	Spring Pin	1	38036
11	Inlet Bushing	1	38011	37	Apron	1	38037
12	Spring Pin	1	38012	38	Shoe	1	38038
13	Ball Bearing	1	38013	40	Screw	2	38040
14	Front End Plate	1	38014	41	Tension Spring	1	38041
15	Rotor	1	38015	42	Stop Pin	1	38042
16	Key	1	38016	43	Tension Arm	1	38043
18	Rotor Blade	4	38018	44	Ball Bearing	2	38044
19	Cylinder	1	38019	45	Spacer	1	38045
20	Cylinder Pin	1	38020	46	Idle Pulley	1	38046
21	Rear End Plate	1	38021	47	Pulley Bolt	1	38047
22	Ball Bearing	1	38022	48	Adjust Screw	1	38048
23	O-Ring	1	38023	49	Belt Cover	1	38049
24	Motor Nut	1	38024	50	Allen Key Wrench	1	38050
25	Drive Pulley	1	38025	60	Sanding Belt #60	1	38060
26	Washer	1	38026				